




Normally, we would position the pivot approximately 13/16" back (measured at the centerline of the pivot) from the face of the door on an 1 3/4" thick door. If your door is 1 3/8" thick, move the pivot centerline 3/4" back from the face of the door.

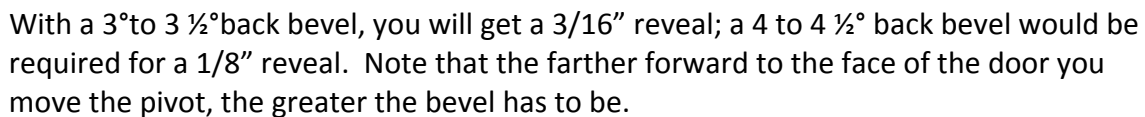

Route the bottom of the door to be installed to accommodate the pivot.



Clamp routing guide to the end of the door.



Route the door as shown.



Chisel the corners of the route square.




Tap the pivot gently into the routed door.



Using the pivot as a template, layout the location of the pivot on the header board, allowing for 1/8" off the end for proper door clearance as shown below.



Mark the center line of the pivot.

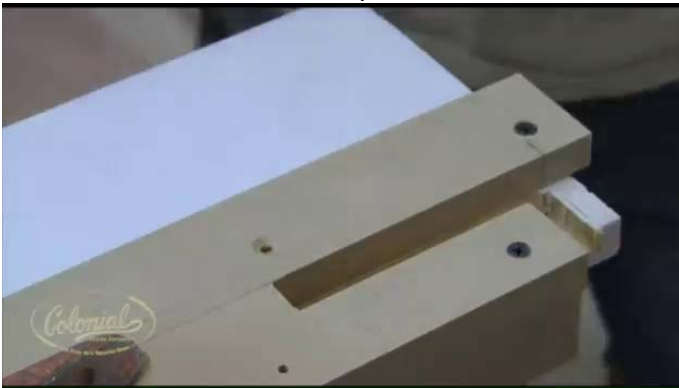

Clamp routing guide to the header board and route for pivot.



Chisel ends square as before.



Push pivot into routed slot



Mark location for pivot on floor using the pivot as a template.



Leave an 1/8" between the pivot and the jamb of the door.



Mark the centerline of the screw holes



Screw the pivot to the floor.



Insert upper pivot screw to connect the male at the top of the door to the female in the header of the door.



Swing lower end of door into alignment.



Screw the pivot screw through the male installed on the bottom of the door into the female located on the floor.



Tighten both pivot screw securely.



Locking
set screw

Be sure to tighten the ¼"-20 locking set screw located in both pivots using an Allen wrench

To watch the video of a pivot installation, please go to YouTube.com and enter Colonial Bronze Pivot Installation in the search box, or navigate to:

<http://www.youtube.com/watch?v=sMUvMpWjiaQ>

Questions? Contact us at 800-355-7894 and ask for technical support

Thank you for purchasing Colonial Bronze products
Proudly made in the USA since 1927